

NINJA®

Mega Kitchen System™

BL771 series

OWNER'S GUIDE



www.ninjakitchen.com

IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® MEGA KITCHEN SYSTEM™.

POLARIZED PLUG

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.




DO NOT modify the plug in any way.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
2. **DO NOT** allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used by or near children.
3. Never leave an appliance unattended when in use.
4. Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
5. **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts. Return the appliance to EURO-PRO Operating LLC for examination, repair or adjustment.
7. **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
8. Always use appliance on a dry, level surface.



- 
- 
- 
9. Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
 10. **CAUTION:** Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the shaft.
 11. Avoid contact with moving parts.
 12. **DO NOT attempt to sharpen blades.**
 13. **DO NOT** use the appliance if blade assembly is bent or damaged.
 14. To reduce risk of injury, never place the blade assembly on base without pitcher or bowl properly attached.
 15. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
 16. The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
 17. **DO NOT** remove the container from the motor base while the appliance is in operation.
 18. To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
 19. **DO NOT** expose containers to extreme temperature changes.
 20. **CAUTION: DO NOT BLEND HOT LIQUIDS.**
 21. **DO NOT** overfill.
 22. Extreme caution must be used when moving an appliance containing hot food, water or other liquids.
 23. **DO NOT** operate the appliance empty.
 24. To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
 25. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
 26. In the event that the unit overloads, the control panel lights will flash and the unit will shut down. Unplug the unit and wait 15 minutes to reset.
 27. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
 28. The maximum rating is based on the 6-Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

⚠WARNING: Extension cords are not recommended for use with this product.

SAVE THESE INSTRUCTIONS

THIS BOOK COVERS MODEL NUMBERS:

BL771 30

BL771C 30

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.

Power: 1500 Watts

Pitcher Capacity: 72 ounces (9 cups) (2.15 L)

Bowl Capacity: 64 ounces (8 cups) (1.89 L)

Mini Prep Bowl Capacity: 24 ounces (3 cups) (.710 L)

 
Single Serve Capacity: 16 ounces (2 cups) (.473 L)




Contents

Thank you for
purchasing the
Ninja® Mega
Kitchen System™.

Getting to Know Your Ninja® Mega Kitchen System™	5
Using the Ninja® Mega Kitchen System™	7
Assembly and Use for the Pitcher	8
Assembly and Use for the Single Serve Cup	10
Assembly and Use for the Bowl	11
Assembly and Use for the Mini Prep Bowl	13
Speed Setting & Uses	14
Care & Maintenance	15
Troubleshooting Guide	16
Replacement Parts	16
Sample Recipes	17
Warranty & Registration	22

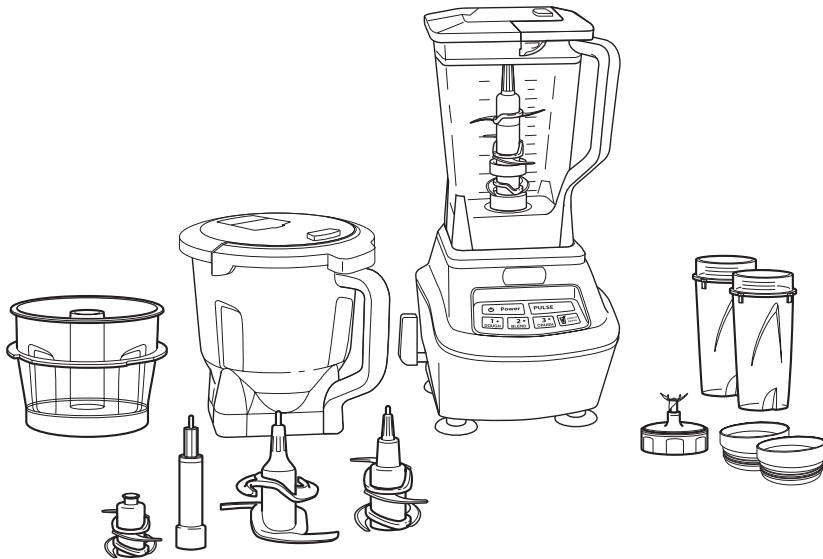

 Getting To Know Your *Ninja*® Mega Kitchen System™

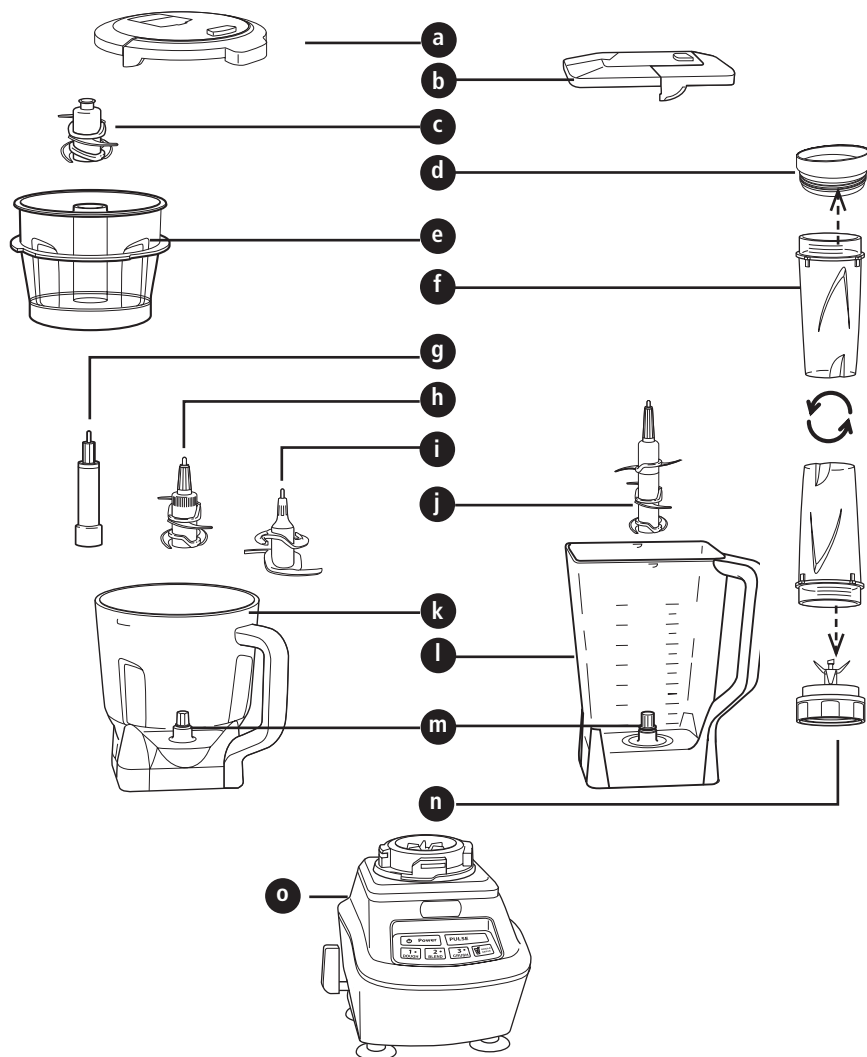


- a Bowl Lid with Locking Handle
- b Pitcher Lid with Locking Handle
- c 24 oz. Mini Prep Bowl Blade
- d To-Go Single Serve Lid (x2)
- e 24 oz. Mini Prep Bowl
- f Single Serve Drink Cup (x2)
- g Spindle for 24 oz. Mini Prep Bowl
- h 4-Blade Assembly (bowl)
- i Dough Blade (bowl)

- j 6-Blade Assembly (pitcher)
- k 64 oz. Bowl
- l 72 oz. Pitcher
- m Gear Shaft
- n Single Serve Blade
- o Motor Base
- p Power Cord (not shown)

NOTE: Attachments are **not** interchangeable.



 The Ninja® Mega Kitchen System™ is a professional, high powered innovative tool with a sleek design and outstanding performance, a true asset to any kitchen. It is perfect for ice crushing, blending, food processing, and complete juicing. The Ninja® Mega Kitchen System™ also features a unique capability to knead dough for pizzas, breads, pretzels and cookies! Create all of your favorite recipes fast and easy with just one touch of a button. For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

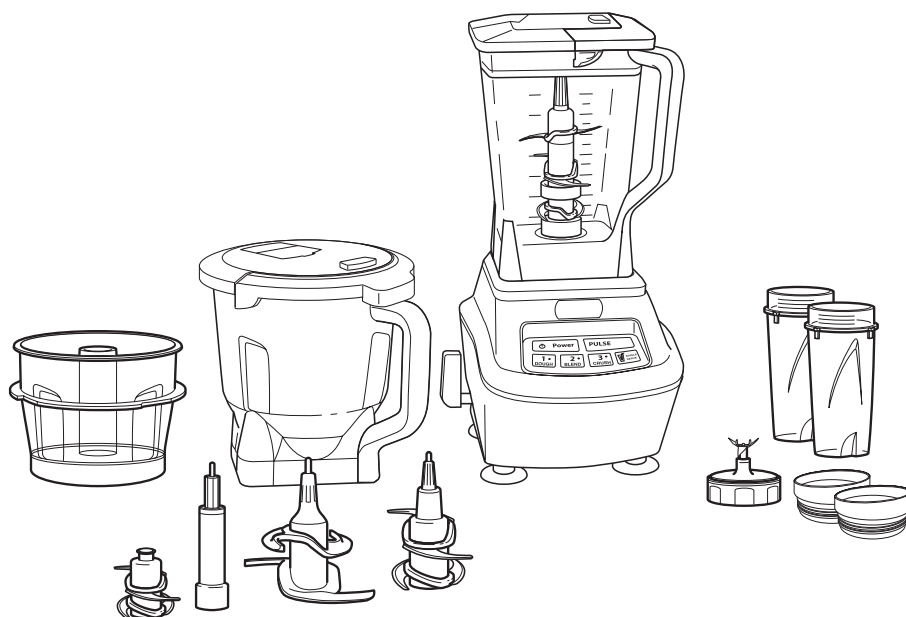

FEATURES:

- **Patented Ninja® Technology**
- **Extra Large, 72 oz. Pitcher - BPA Free**
- **64 oz. Bowl with Drizzle Hole - BPA Free**
- **24 oz. Mini Prep Bowl - BPA Free**
- **Single Serve Drink Cup - BPA Free**
- **Lock-In Lid, Featuring Pour Spout**
- **Easy to Clean Electronic Control Panel**
- **Sturdy, Non-Slip Base**
- **Hidden Drain Holes - prevent water build up from dishwasher**

Using the Ninja® Mega Kitchen System™

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- ⚠ IMPORTANT:** Never add ingredients into the container before placing the attachment in first.
- ⚠ IMPORTANT:** Attachments are **not** interchangeable.
- ⚠ CAUTION:** Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the shaft.
- ⚠ IMPORTANT: DO NOT** attempt to operate the appliance without the lid on.
- ⚠ IMPORTANT:** Never run the appliance empty.
- ⚠ CAUTION:** Use extreme caution when processing hot foods to avoid accidental scalding or burns. Do not process food that is hotter than 180°F/82°C. Allow very hot ingredients to cool before processing.
- ⚠ WARNING:** Secure the appliance while in use by pressing down on the lid with one hand.
- ⚠ CAUTION:** Never remove the container while the appliance is still running.
- ⚠ WARNING:** Never leave the appliance unattended while in use.

BEFORE FIRST USE

- 1 Remove all packaging material and labels from the appliance.
- 2 Wash the lids, pitcher, bowls, single serve cups and attachments in warm, soapy water with a soft cloth. **Use caution when washing the blade assemblies as the blades are very sharp.**
- 3 Rinse and dry thoroughly.
- 4 The pitcher, bowls, single serve cups, lids and attachments, are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the attachments are removed from the containers before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.



Assembly and Use for the Pitcher

Assembly

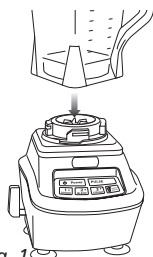 


Fig. 1



Fig. 3a

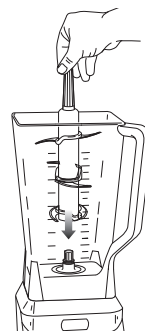 


Fig. 4

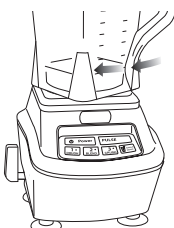 


Fig. 2



Fig. 3b

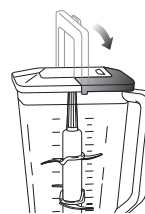 


Fig. 5

⚠ IMPORTANT: Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Align and lower the Pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
- 3 Rotate the pitcher clockwise as far as it will go to lock in place. (Fig. 2)
- 4 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- 5 Holding the 6-Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the attachment is seated properly and is standing upright. (Fig. 4)
NOTE: The blade will fit loosely on the drive gear.

- 6 Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.
NOTE: If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.
- 7 Plug the power cord into the electrical outlet and press the power button (⏻).
NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.
- 8 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (➡) located on the lid with the arrow (⬆) located on the pitcher's handle. (Fig. 5) Press the handle down until you hear a click.

Assembly and Use for the Pitcher - cont.

⚠ WARNING: Never leave the appliance unattended while in use.

USE

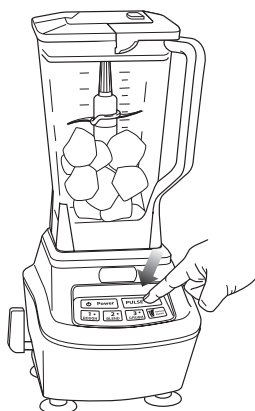 


Fig. 6

REMOVAL

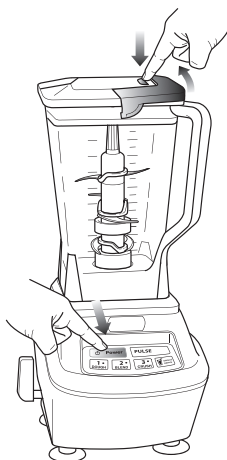 


Fig. 7

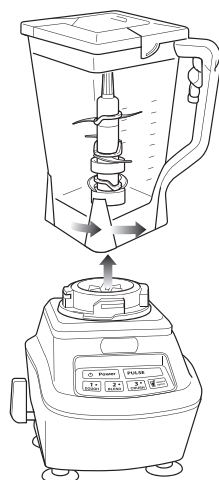 


Fig. 8

- 9 Select the speed that best suits your needs. (Fig. 6)

NOTE: Pulse ingredients for even chopping by pressing down in short intervals.

- 10 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the attachment to stop turning. (Fig. 7)
- 11 To remove the lid, press the release button on the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the pitcher counter clockwise and then lift off the base. (Fig. 7, Fig. 8)
- ⚠ CAUTION:** Never insert your hands in the pitcher as the blades are sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

- 12 Depending on the consistency of the contents in the container, open the pour spout cap and use the spout to empty liquid contents. For thicker consistencies, remove the lid and attachment carefully (by its shaft), then empty contents from the container.

- 13 Make sure that the unit is unplugged when not in use.



Assembly and Use for the Single Serve Cup

⚠ WARNING: Never leave the appliance unattended while in use.

ASSEMBLY

USE

REMOVAL

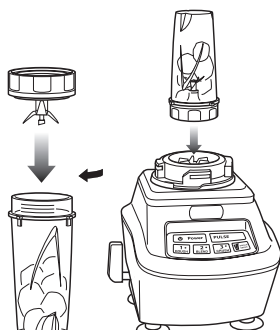 


Fig. 1

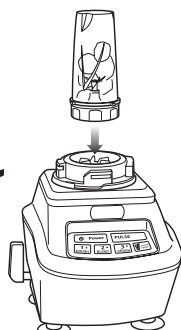 


Fig. 2



Fig. 3

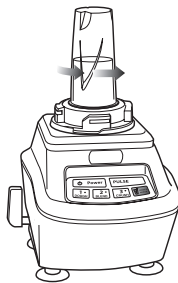 


Fig. 4

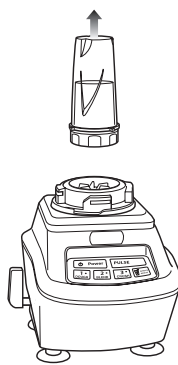 


Fig. 5

 For best results, use short **"PULSES"**... Practice makes perfect!!

⚠ IMPORTANT: Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Add ingredients to the single serve cup.
- 3 Place the single serve blade onto the cup and screw it tightly until you have a good seal. (Fig. 1)
- 4 Turn the single serve cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the single serve cup clockwise. (Fig. 2) Turn the power button on, the single serve button will illuminate.
- 5 Press down on the Single Serve button in short intervals to activate. (Fig. 3)

- 6 Once you have reached your desired consistency, turn the power button off. Turn the single serve cup counter clockwise and pull straight up to remove. (Fig. 4, Fig. 5)
NOTE: Do not overfill! To avoid spilling, do not add ingredients past the "Max" fill line.

- 7 Turn the cup upright and remove the single serve blade by twisting the blade assembly clockwise.
- 8 Place the To-Go drinking lid onto the single serve drink cup, twist to seal and enjoy!
- 9 Make sure that the motor base is unplugged when not in use.

NOTE: To order additional Single Serve Cups, please visit our website: www.ninjakitchen.com or feel free to contact customer service: 1-877-646-5288.

Assembly and Use for the Bowl

⚠ WARNING: Never leave the appliance unattended while in use.

ASSEMBLY

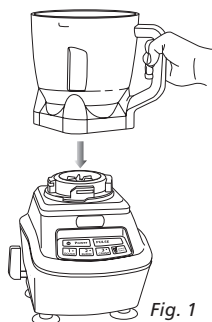 


Fig. 1



Fig. 3a

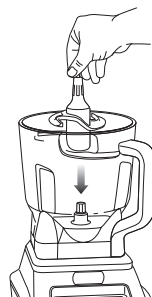 


Fig. 4

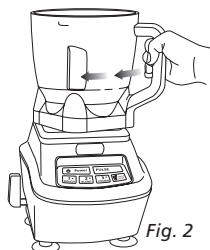 


Fig. 2



Fig. 3b

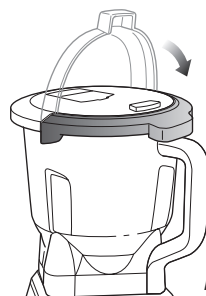 


Fig. 5

⚠ IMPORTANT: Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Align and lower the Bowl onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
- 3 Rotate the bowl clockwise as far as it will go to lock in place. (Fig. 2)
- 4 The bowl can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- 5 Holding the desired blade by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the attachment is seated properly and is standing upright. (Fig. 4)
NOTE: The blade will fit loosely on the drive gear.
- 6 Add the ingredients to the bowl, making sure that they do not exceed the highest measured marking line on the side of the bowl.

- 7 Plug the power cord into the electrical outlet and press the power button (⏻).

NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.

- 8 Holding the lid by the handle in the upright position, place it on top of the bowl aligning the arrow (▼) located on the lid with the arrow (▲) located on the bowl's handle. (Fig. 5) Press the handle down until you hear a click.

⚠ NOTE: The 64 oz. bowl is not intended for blending drinks. Do not overfill.

NOTE: To add liquids during processing, open the drizzle hole on the top of the lid and pour the liquid slowly into the mixture.



USE

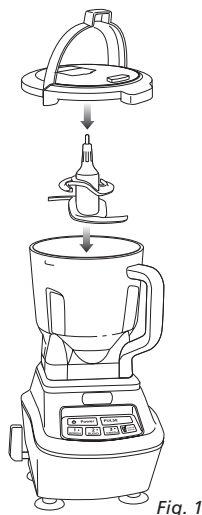 


Fig. 1

REMOVAL

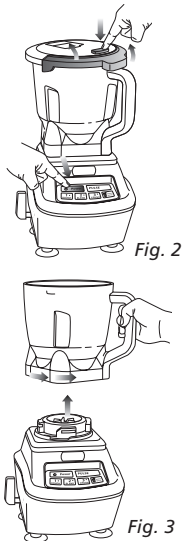 


Fig. 2

Fig. 3

USE

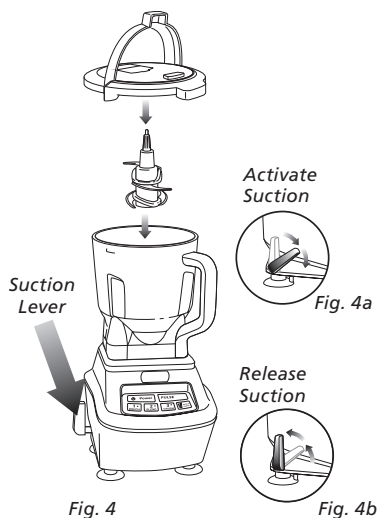 


Fig. 4

Fig. 4a

Fig. 4b

USING THE 4-BLADE ASSEMBLY

- 1 Holding the 4-Blade assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the attachment fits around the gear shaft and that it is standing straight.
- 2 Add the ingredients and secure the bowl lid onto the bowl. (Fig. 1)
- 3 Plug the power cord into the electrical outlet and press on the power button (⏻).
- 4 Select the speed that best suits your needs. Pulse ingredients for even chopping by pressing down in short intervals.

NOTE: Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.

- 5 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the blade to stop turning.
- 6 To remove the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the bowl counter clockwise and then lift off the base. (Fig. 2, Fig. 3)

USING THE DOUGH BLADE

- ⚠ **IMPORTANT:** Use only the "DOUGH" button when using this attachment.
- ⚠ **IMPORTANT:** Use the suction lever when using the dough blade on SPEED 1/DOUGH.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top. (Fig. 4) Push the suction lever on the side of the motor base down to secure the suction feet to the surface. (Fig. 4a) If the suction feet have not totally adhered to the surface, press down lightly on the base to give the suction feet a better grip.

- 2 Secure the bowl onto the motor base.
- 3 Holding the dough blade by the shaft, place it onto the gear shaft inside the bowl. Ensure that the attachment fits around the gear shaft and that it is standing straight.

- 4 Add the ingredients and secure the bowl lid onto the bowl.

NOTE: For best results add wet ingredients first and then add dry ingredients.

- 5 Plug the power cord into the electrical outlet and press on the power button (⏻).
- 6 Once finished making dough, remove the bowl from the motor base. (Fig. 2, Fig. 3)
- 7 To release the motor base from the counter or table top, pull the suction lever up to release the suction feet. (Fig. 4b)

NOTE: The suction lever activates the suction feet for added stability.

Assembly and Use for the Mini Prep Bowl

⚠ WARNING: Never leave the appliance unattended while in use.

ASSEMBLY



Fig. 1



Fig. 3



Fig. 2



Fig. 4

USING THE 3 CUP MINI PREP BOWL

- 1 Place the 64 oz. bowl onto the motor base. (See assembly instructions on page 11.)
- 2 Holding the spindle by the shaft, place it onto the gear shaft inside the 64 oz. bowl. Ensure that the attachment fits around the gear shaft and that it is standing straight. (Fig. 1)
- 3 Place the mini prep bowl aligning the spindle inside the center post. (Fig. 2)
- 4 Hold the prep bowl blade by the shaft and carefully place it over the center post of the mini prep bowl. (Fig. 3)
- 5 Add ingredients into the mini prep bowl.
- 6 Holding the lid by the handle in the upright position, place it on top of the 64 oz. bowl aligning the arrow (▼) located on the lid with the arrow (▲) located on the bowl's handle. (Fig. 4) Press the handle down until you hear a click.

USE

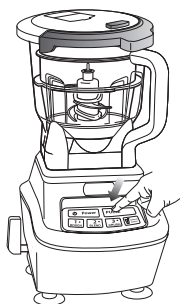 


Fig. 5

REMOVAL

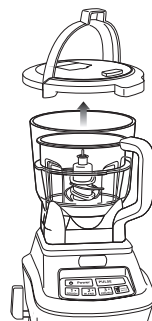 


Fig. 6



Fig. 7

- 7 Plug the power cord into the electrical outlet and press on the power button (⏻).
- 8 Select the speed that best suits your needs. For best results, press the Pulse button in short intervals. (Fig. 5)
- NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.
- 9 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the blade to stop turning.
- 10 To remove the lid, pull the lid handle up to a 90° angle and lift the lid off. (Fig. 6)
- 11 Carefully hold the mini prep bowl blade by the shaft and lift it out of the mini prep bowl. (Fig. 7)
- 12 Turn the bowl counter clockwise and then lift off the base.

⚠ NOTE: Do not fill ingredients past the "MAX" fill line.



Speed Setting & Uses

FUNCTION	CONTAINER	ATTACHMENT	SPEED BUTTON	TYPE OF FOOD
Single Serve Blending	Single Serve Cup	Single Serve Blade	Single Serve	Smoothies Frappes Milk Shakes
Mincing	Single Serve Cup Mini Prep Bowl	Single Serve Blade Mini Prep Bowl Blade	Single Serve Pulse	Onion Garlic Herbs
Kneading	Bowl	Dough Blade	1	Bread dough Pie dough Pizza dough Pretzel dough
Dough Mixing	Bowl	Dough Blade	1	Cookie dough
Processing	Pitcher/Bowl Single Serve Cup Mini Prep Bowl	Blade Assembly Single Serve Blade Mini Prep Bowl Blade	2 Pulse Single Serve	Pâtés Stewed fruits Dips Apple sauce Spreads Soups Baby food
Emulsifying	Bowl Mini Prep Bowl	Blade Assembly Mini Prep Bowl Blade	2	Salad Dressings Dips Sauces
Grinding	Bowl	Blade Assembly	2	Meat
Grating	Bowl Single Serve Cup	Blade Assembly Single Serve Blade	3 or Pulse Single Serve	Grated cheese Bread crumbs Spices
Chopping	Bowl Single Serve Cup Mini Prep Bowl Pitcher	Blade Assembly Single Serve Blade Mini Prep Bowl Blade	Pulse Single Serve 3	Salsa Vegetables Nuts
Mixing	Bowl	Dough Blade	1	Light cake mixes Batters
Ice Crushing	Pitcher Single Serve Cup	Blade Assembly Single Serve Blade	3 Single Serve	Ice
Pureeing	Pitcher Single Serve Cup	Blade Assembly Single Serve Blade	3 Single Serve	Smoothies Smooth soups Milkshakes

⚠ IMPORTANT: Use the suction lever when using the dough blade on SPEED 1/DOUGH.

Care & Maintenance

HOW TO CLEAN

- ⚠ **CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.
- ⚠ **CAUTION:** DO NOT immerse the motor base into water or any other liquid.
- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.
- 3 Place the pitcher, single serve cup and bowl in the dishwasher. Place the lids and attachments on the top rack. **Use caution when handling the blade assemblies as the blades are very sharp.**

NOTE: You may also wash the containers by filling $\frac{3}{4}$ of the container with warm water and a drop of dish washing detergent, placing the corresponding lid on the container and pressing the pulse button a few times. Once clean, remove the container from the motor base. Rinse the container, attachment and lid under running water. Allow all the parts to dry before storing.

Please call customer service if any servicing needs to be performed on the appliance at 1-877-646-5288.

HOW TO STORE

- 1 Store the Ninja® Mega Kitchen System™ upright with the pitcher on the motor base, 6-Blade assembly inside the pitcher and lid on the pitcher. Do not place anything on top. Store the bowl with the 4-Blade assembly inside and the lid on top. Store the single serve cup and the rest of the attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard.

RESETTING THE MOTOR THERMOSTAT

The Ninja® Mega Kitchen System™ features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop and the power light will remain lit and speeds 1, 2 and 3 will flash. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the container and ensure that no food is jamming the cutting blades or attachments.
- 3 Allow the appliance to cool for approximately 15 minutes.
- 4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.



Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor Doesn't Start or Attachment Doesn't Rotate.	<p>Make sure the container is securely placed on motor base.</p> <p>Make sure the lid is securely on container in the correct position (align arrows).</p> <p>The appliance is turned "Off". Press the power button (⏻) to turn "On".</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overloaded. The appliance will stop and the power light will remain on while speeds 1, 2 and 3 will flash. Unplug and wait approximately 15 minutes before using again.</p> <p>The unit has overheated. Unplug and wait approximately 15 minutes before using again.</p> <p>Check to make sure the unit is not overloaded.</p>
Food is Unevenly Chopped.	<p>Either you are chopping too much food at one time, or the pieces are not of even size and processing smaller amounts per batch.</p>
Food is Chopped Too Fine or is Too Watery.	<p>The food has been over processed. Use pulse button for controlled processing.</p>
Food Collects On Lid or On the Sides of the Container.	<p>The mixture is too thick. Add more liquid.</p>
You Cannot Achieve Snow From Solid Ice.	<p>Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.</p>
Motor Base Won't Stick to Counter or Table Top.	<p>Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces. Suction feet WILL NOT stick on some surfaces such as, wood, tile and non-polished finishes.</p> <p>DO NOT attempt to use appliance when the motor base is stuck to a surface that is not secure, (cutting board, platter, plates, etc.).</p>

Replacement Parts

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, please visit our website: www.ninjakitchen.com or feel free to contact customer service: **1-877-646-5288**.

Recipes

Easy Pizza Dough

Ingredients:

1/4 oz. Pkg.	Dry Active Yeast
1 tsp.	Salt
1 Tbsp.	Sugar
2/3 Cup	Water, warmed to 110-115°F
1/4 Cup	Canola Oil (substitute olive oil)
2 Cups	All-Purpose Flour

Directions:

Place the yeast, salt, sugar and water in the bowl. Pulse on 1 for 10 seconds. Add the oil and flour and blend on 1 until the dough is smooth and no lumps remain. Transfer the dough to a lightly-oiled bowl and cover. Let rise for about 1 hour.

If you are making high-rise pizza dough, punch down the dough and let rise again for 45 minutes. If not, eliminate the second rising and spread the dough onto a pizza pan or baking sheet that has been lightly coated with cooking spray.

Add sauce and toppings as preferred and bake at 425°F for 25-30 minutes, or until the crust is lightly browned and the toppings and cheese are hot.

Makes 1 pizza crust.

Bowl
Dough Blade
Bowl Lid

Golden Mashed Potato Puffs

Ingredients:

4 Medium	Russet Potatoes, peeled and diced
1/2 Cup	Milk, warmed
1	Egg, beaten
1/2 tsp.	Baking Powder
2 tsp.	White Flour
1/2 Cup	Parmesan Cheese, grated
1/2 tsp.	Salt

Directions:

In a large saucepan filled with water, bring the potatoes to a boil, and then reduce the heat to medium-low and simmer until tender. Drain the potatoes and place into the pitcher. Add the remaining ingredients, Reserving 2 tablespoons of Parmesan cheese, and pulse on 1 until blended.

Preheat the oven to 350°F. Drop the potato mixture by teaspoons onto a non-stick baking sheet. Sprinkle the potato puffs with the remaining Parmesan cheese and bake for 20 minutes. Allow the puffs to cool slightly and serve warm.

Pitcher
6-Blade Assembly
Pitcher Lid



Orange Double-Up

Ingredients:

4 Cups	Orange Juice, divided
1/2 Cup	Frozen Orange Juice Concentrate
2 Medium	Fresh Oranges, peeled, seeded and cut into pieces
16 oz.	Carbonated Water

Directions:

Pour 2 cups of orange juice into the pitcher. Add the juice concentrate and the fresh oranges. Blend on 2 until uniformly smooth. Pour the mixture into a large serving pitcher and add the remaining orange juice and carbonated water. Stir well to blend. Pour over ice and serve. Serves 4 to 6.

Pitcher
6-Blade Assembly
Pitcher Lid

Pineapple Nut Crumb Cake

Ingredients:

1/2 Cup	Butter, softened
3/4 Cup	Sugar
2	Eggs
1 1/2 tsp.	Vanilla Extract
1 1/4 Cups	All-Purpose Flour
1 tsp.	Baking Powder
1 Fresh	Pineapple, peeled, cored, quartered lengthwise and sliced

Crumb Topping:

1 1/4 Cups	All Purpose Flour
1/2 Cup	Sugar
1/4 tsp.	Ground Cinnamon
1/2 Cup	Butter
1/2 Cup	Walnuts

Directions:

Preheat the oven to 350°F. Butter the bottom and sides of a 10-inch spring form pan. Place the softened butter in the bowl and blend on 1 until very fluffy. Add the sugar and blend again on 1 for 10 seconds. Use a spatula to clean the sides of the bowl. Add the eggs and vanilla and blend on 1 until uniformly smooth.

Add the flour and baking powder and blend on 1 just until all the ingredients are moistened. Pour the batter into the prepared pan.

In the bowl, combine the flour, sugar and cinnamon for the crumb topping. Add the butter and walnuts and pulse on 1 for 20 seconds. Remove and set aside.

Place the pineapple slices on top of the batter, leaving a 1/2-inch margin around the outside edge. Scatter the crumb mixture over the top. Bake for 50 to 60 minutes, or until the cake is firm.

Remove the cake and cool. Remove the pan rim and place on a serving platter.

Serves 8 to 10.

Bowl
Dough Blade
Bowl Lid

Recipes - cont'd

English Toffee Cookies

Ingredients:

1 Cup	Butter, softened
1/2 Cup	Dark Brown Sugar, packed
1/2 Cup	Sugar
1 tsp.	Vanilla Extract
1	Egg Yolk
2 Cups	Cake Flour
Pinch	Salt
10 oz.	Milk Chocolate Candy Bar, melted
1/2 Cup	Almonds, chopped

Directions:

Place the softened butter, sugars, extract and egg yolk in the bowl and blend on 1 until smooth and creamy. Use a spatula to clean the sides of the bowl. Add the flour and salt. Blend again until smooth. Spoon the cookie dough onto a baking sheet that has been coated with cooking spray. Allow a 2-inch margin, as the dough will spread.

Lightly spread the chocolate over the dough and sprinkle the nuts over all. Bake at 350° for 15 to 20 minutes. Cool slightly and cut into small squares. Cool on a wire rack.

Makes about 24 cookies.

Bowl
Dough Blade
Bowl Lid

Roasted Tomato & Olive Bruschetta

Ingredients:

4 Medium	Tomatoes, cored and quartered
2 Tbsp.	Extra-Virgin Olive Oil
1 Clove	Garlic, peeled
1/4 Cup	Black Olives, pitted
1 tsp.	Fresh Basil
	Fresh Bread Rounds, lightly toasted

Directions:

Place the tomatoes on a baking sheet and toss with the oil. Sprinkle with salt and pepper. Bake at 350°F for 30 to 40 minutes, or until very soft and tender. Remove and cool slightly.

Place the cooled tomatoes in the bowl and add the garlic, olives and basil. Add a few drops of oil if the mixture looks dry. Pulse on 1 for just a few seconds, or long enough to roughly chop the vegetables together. Don't over-blend.

Spoon the bruschetta on the bread rounds and serve. Makes about 12 servings.

Bowl
4-Blade Assembly
Bowl Lid



Sweet Strawberry Smoothie

Ingredients:

1/2 Cup	Half-and-Half Cream
1/2 Cup	Whole Milk
1 Cup	Ripe, Sweet Strawberries, stemmed and washed
1/2 Cup	Lowfat Vanilla-Flavored Yogurt
2 Cups	Ice Cubes

Directions:

Pour the milk and cream into the pitcher and add the strawberries, yogurt and ice cubes. Blend on 3 until the mixture is very smooth and no fruit pieces remain. Pour into glasses and serve right away. Serves 2 to 3.

Pitcher
6-Blade Assembly
Pitcher Lid

Middle Eastern Tabouli

Ingredients:

1 Cup	Plain Bulgur (cracked wheat), uncooked
1 Cup	Water
1 Bunch	Fresh Parsley, stemmed
6 Sprigs	Fresh Mint, stemmed
1/2 Small	White Onion, peeled
2 Cloves	Garlic, peeled
1/3 Cup	Extra Virgin Olive Oil
2	Lemons, juiced (about 1/4 cup)
1/2 tsp.	Salt
1/2 tsp.	Freshly Ground Black Pepper
2	Ripe Tomatoes, cored and diced
3	Green Onions, cleaned and chopped

Directions:

In a large bowl, mix the bulgur with the water. Cover and let stand for 20 minutes, until the water is absorbed and the wheat is tender.

Place the parsley, mint, onion and garlic into the bowl and pulse on 1 to make a small, rough chop, cleaning the sides of the bowl with a spatula as necessary. Transfer the mixture to the bowl of softened bulgur.

Place the olive oil, lemon juice, salt and pepper in the bowl and blend on 2 until incorporated. Add the dressing to the bulgur mixture and lightly toss to mix. Add the chopped tomatoes and green onion, again tossing gently to mix. Taste and adjust the seasonings. Serve well-chilled or at room temperature. Serves 6.

Bowl
4-Blade Assembly
Bowl Lid

Recipes - cont'd

Banana Pineapple Smoothie

Ingredients:

2 Cups	Pineapple Juice
1 Cup	Pineapple Chunks, fresh or canned
1 Small	Ripe Banana, cut into chunks
1/4 Cup	Unsweetened Coconut Milk
1 Tbsp.	Honey
3 Cups	Ice Cubes

Directions:

Pour the juice into the pitcher and add the pineapple, banana, coconut milk, honey and ice. Blend on 3 until very smooth. Pour into glasses and serve at once. Serves 3 to 4.

Pitcher
6-Blade Assembly
Pitcher Lid

Crisp & Rich Butter Cookies

Ingredients:

1 Cup	Butter, softened
1/2 Cup	Sugar
Pinch	Salt
1 Large	Egg
1 tsp.	Vanilla Extract (substitute lemon extract)
1/2 tsp.	Almond Extract
2 1/2 Cups	All-Purpose Flour

Directions:

Place the softened butter, sugar, salt, egg and extracts in the bowl. Blend on 1 until very light and fluffy. Add the flour and pulse on 1 until combined. Remove the dough paddle and clean the sides of the bowl with a spatula, mixing in any unblended dough. Cover with the lid and chill the dough for about 20 minutes.

Fill a cookie press and press shapes onto ungreased cookie sheets. Bake at 400°F for 8 to 10 minutes. Cookies should be set, but not browned, when done. Cool on wire racks before serving.

Makes about 6 dozen cookies.

Bowl
Dough Blade
Bowl Lid





EURO-PRO

ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid. For assistance with warranty service options or customer support, please call our customer care and product specialists at , call 1 (800) 798-7398 or visit our website www.sharkclean.com.

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase is required and a fee of \$19.95 will apply to cover the cost of return freight. *

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

***IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**

Product Registration

Please visit www.ninjakitchen.com or call **1-877-646-5288** to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.



Euro-Pro Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7

1-877-646-5288

www.ninjakitchen.com

Copyright © 2012 Euro-Pro Operating LLC

Printed in China

Illustrations may differ from actual product.

BL771series.E.121206.6